



GKT03104



GKT03804



GKT03106

How to change the base plate on Xpert Gasket Shears.


Equipment list:

- Xpert solid blade Gasket Shears (Product code: GKT03104) or Xpert Stanley Blade Mitre Cutters (Product code: GKT03804)
- Spare base plate (Product code: GKT03106)
- Hex key
- Protective gloves


Changing the base plate:

Before you start, make sure you are wearing appropriate gloves to protect your hands when handling the gasket shears. Ensure the blade safety catch is on.

1. Loosen the hex fastening with a hex key to remove the old base plate.
2. Push out the retaining bolt.
3. Lift off the old base plate and replace with the new part.
4. Push in the retaining bolt
5. Brace the nut to stop it from spinning and tighten hex fastening.

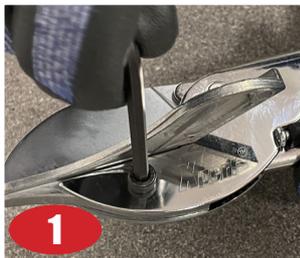

1

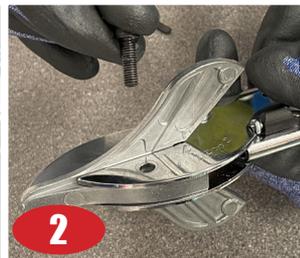

2



3



3



3



3



4



5